




X320 Thermal Imager

Caution: Never point directly into the sun, welding arcs, or any other extreme intensity objects.

Cleaning: Use only soft cloth. Do not use any chemicals.

Focus Adjust
Rotate lens barrel to adjust focus.

Eye Piece

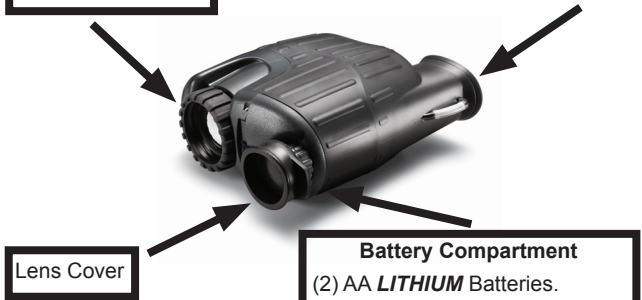

Lens Cover

Battery Compartment
(2) AA *LITHIUM* Batteries.
Twist knob to open/close battery door (Battery Polarity noted on housing).

NOTE: The use of AA Alkaline batteries is acceptable but will provide inconsistent performance and run-time.



X320 Thermal Imager



Optional External Connections

***WARNING:** USE ONLY
SUPPLIED CABLES

Video/USB Jack

View video on external monitor. USB communication for customization with available GUI and cable.

Power Jack (1.3mm)

Connect DC power supply
(8v-16v)*

User Control Switch

Rotation: Turn camera ON & OFF and adjust display brightness

Short Push: Electronic Zoom

Long Push: White/Black hot, Hot Target Levels I, II and Custom Color

*Optional external power supply can be used to operate the camera. However, it will NOT recharge the batteries.

EOTech

An L-3 Communications Company
3414 Hermann Drive
Garland, TX 75041

Ph. 1-888-368-4656

www.eotech-inc.com